


## NX1000 Firmware Upgrade guide

### 1. Before upgrading the firmware

- Make sure you use fully charged batteries.  
 If camera malfunction is caused during a firmware upgrade for the reasons given above, the mainboard may have to be serviced by a Samsung service centre, which may result in major repair charges.
- Before upgrading the firmware, make sure that you format the memory card on your PC or camera and then download the necessary firmware file.
- Download the firmware file into the root directory of the memory card.
- Do not operate the camera, remove the batteries, or cut the power while upgrading firmware. Operate the camera only after the firmware upgrade is complete.

### 2. How to upgrade firmware?

- 1) Download the firmware file into the root directory of the SD memory card.

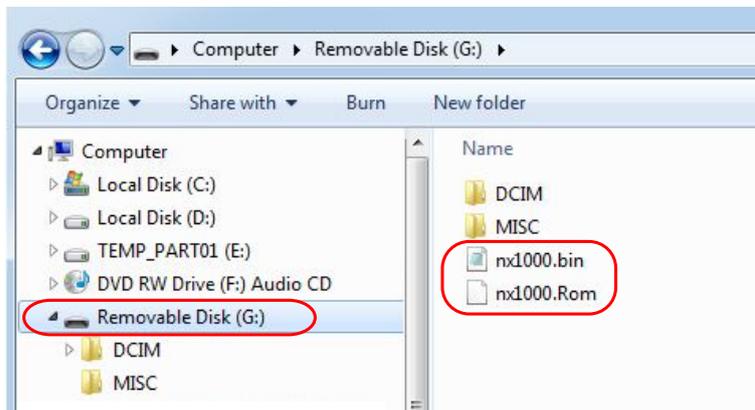

- 2) Insert the SD card on which the firmware file is to be saved.
- 3) Press the menu button.
- 4) Move to "Settings 3" (Press the left button of 4-way key)
- 5) Select the "Device Information" → press the OK key.



6) Select the "Firmware update" → "Body Firmware".



7) Select "Yes"



8) The upgrading progress bar will be increased, then after finishing it, camera will turn off



※ Should you need further detailed information, or if you experience difficulty in upgrading firmware, do not proceed with the process on your own. Visit a Samsung service center near you.

※ If the firmware upgrade is not completed successfully, Remove the battery and re-insert then the firmware upgrade will start again.